
- A)1 Pc Stroage Bench
- B)16 Pcs Screws
- C) 4 Pcs Legs

## **Assembly Instruction:**

- 1) Please confirm with the number and content information of the parts.
- 2) Turn the puff over.

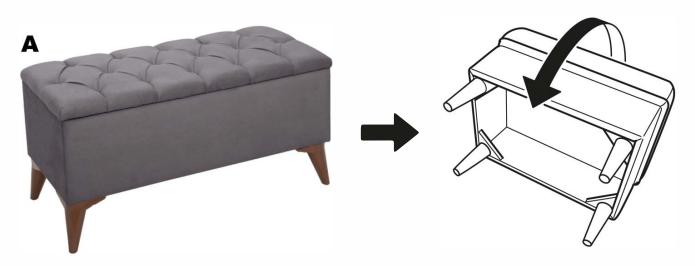

3) Place the plastic feet as in the picture and screw them carefully with a drill or fillister head screw screwdriver.

